



Sol


Office Furniture
COLLECTION

Sol-mates Collaborative Tables Installation Guide



888-993-3757

Identifying Parts:

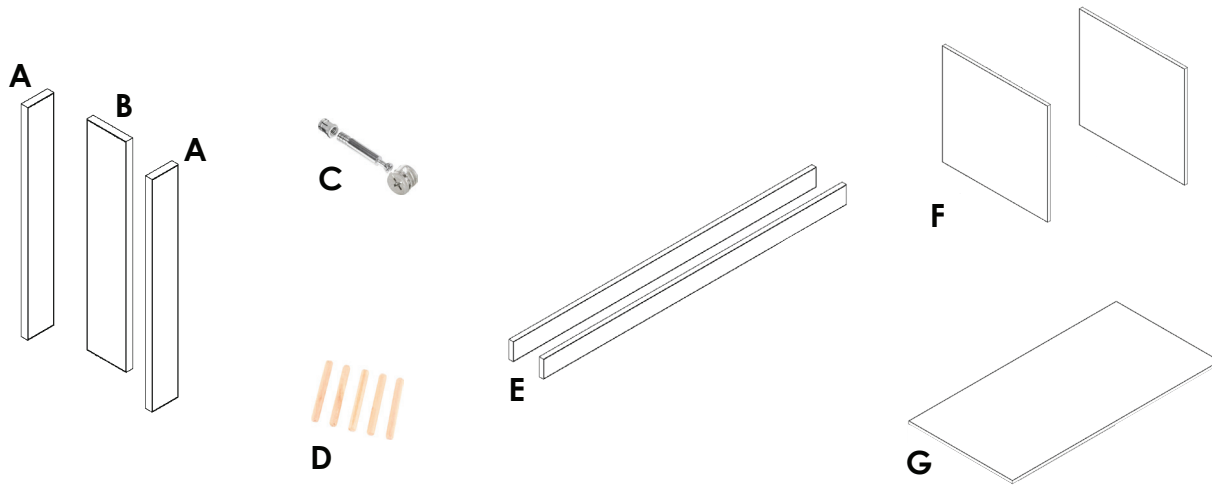


Key:

- A=** Side Boxes
- B=** Side Box Fillers
- C=** Cam Locks
- D=** Wooden Dowels
- E=** Top Box
- F=** Sides of Table
- G=** Table Top

*Parts are connected using cam locks and wooden dowels. The amount of cam locks and wooden dowels will vary based on size.


Step 1:

Using cam locks(C), connect side boxes(A) to side box fillers(B).

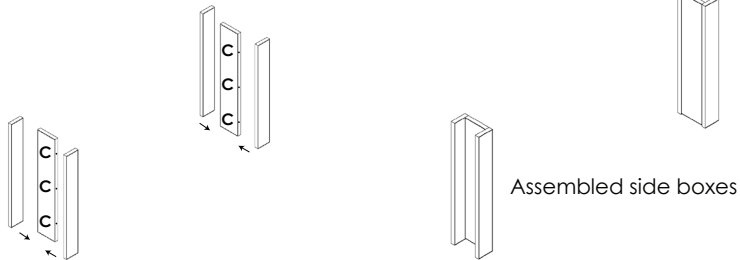



Step 2:

Using cam locks(C), connect top box(E) to top of assembled side boxes

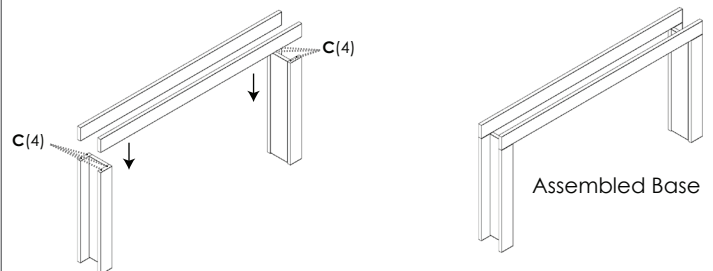


Step 3:

Using cam locks(C) and wooden dowels(D), connect one side of table(F) to assembled base.

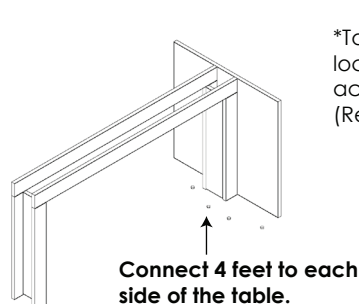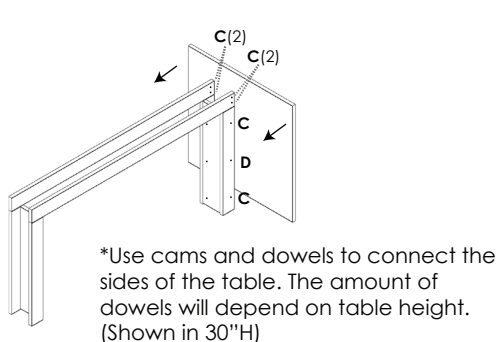


*To connect the feet and tighten cam locks, tilt the base onto its side to access the bottom of the base. (Recommended as a 2 person job)

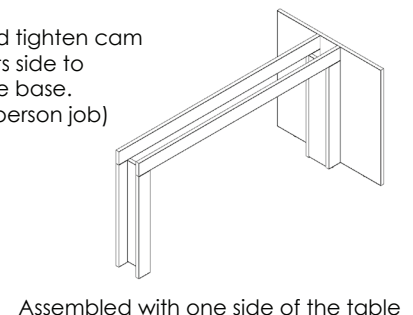


Step 4:

Using cam locks(C) and wooden dowels(D), connect second side of table(F) to assembled base.

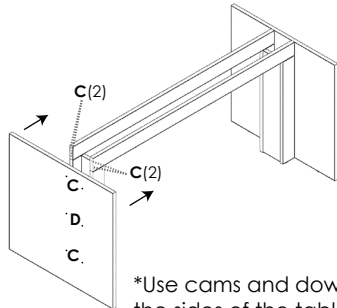


*Use cams and dowels to connect the sides of the table. The amount of dowels will depend on table height. (Shown in 30"H)

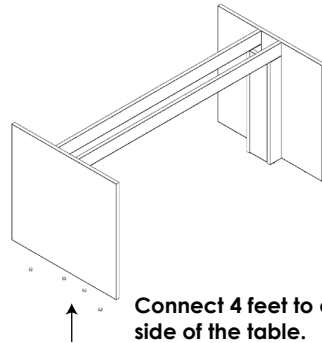

Connect 4 feet to each side of the table.


*To connect the feet and tighten cam locks, tilt the base onto its side to access the bottom of the base. (Recommended as a 2 person job)

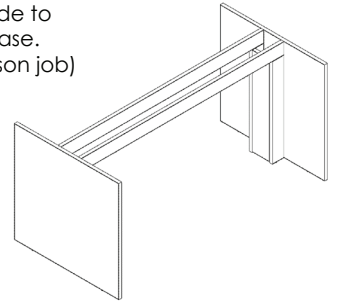



Assembled with both sides of the table

Step 5:

Using cam locks(C) and wooden dowels(D), connect the table top(G) to the base and sides.

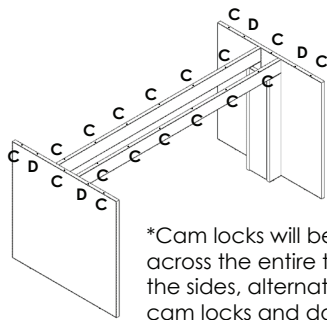

*Cam locks will be used across the entire top box. For the sides, alternate between cam locks and dowels.

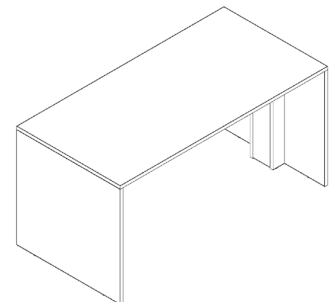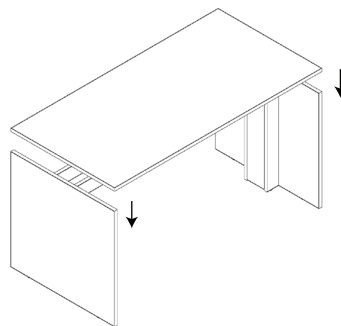

Fully assembled table

*The amount of cams and dowels will depend on table height. (Shown in 30"H)

<p>Number of Cs & Ds per table size: Large Tables= 45 Small Tables= 36</p>
--

Step 6:

Optional Electric: If electric was added, follow electric instructions found in electric box.

***If connecting electric a gromet might be needed.**