




Table of Contents



Parametric Wall Art Instruction Guide
Page 1-3



Hexagon Wall Art Instruction Guide
Coming Soon

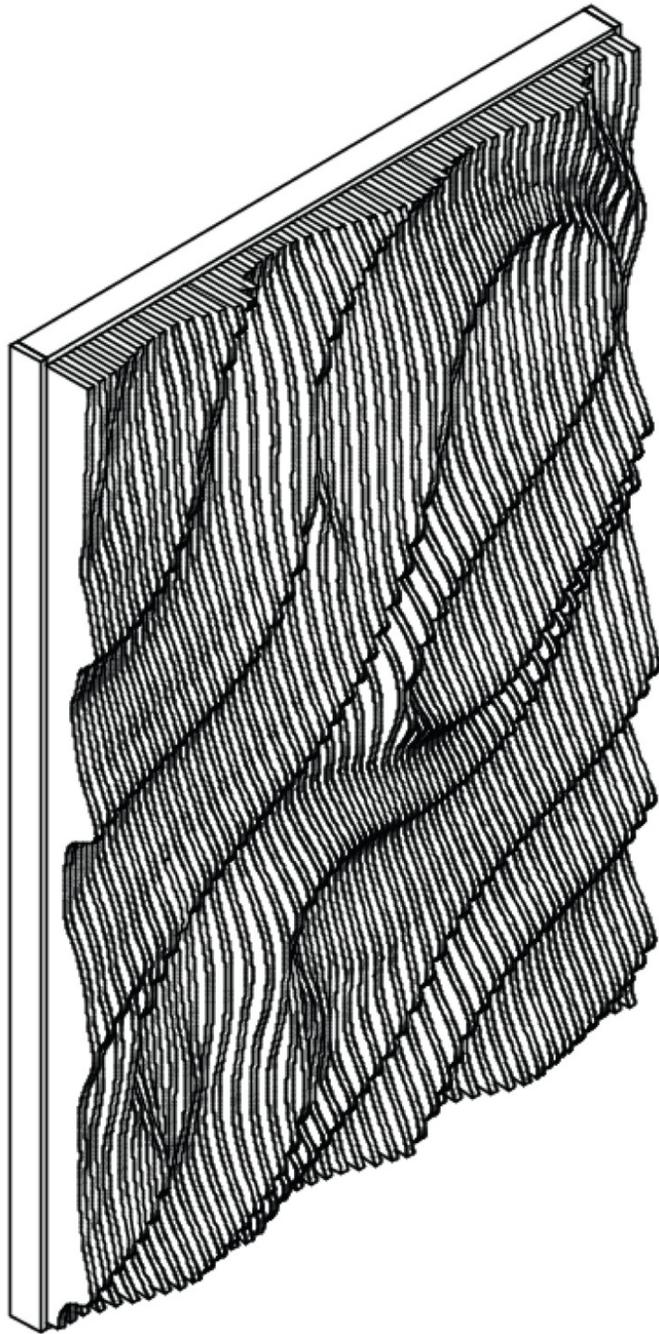

Tools Required:

Screw gun / drill
Hammer
Level
Measuring tape

Pro Tips

Stud finder
recommended for strongest wall attachment

Recommended: Ladder

Included Parts:

- A=** 2 × Top Frame Rails
- B=** 2 × Side Frame Rails
- C=** Wall Cleats (Upper & Lower)
- D=** Parametric Panels
- E=** Tacking nails for edge lips & frame rails)
- F=** Mounting screws (for cleats to wall)
- G=** Drywall anchors / butterfly anchors (if studs are not available)


Recommended 2 Person install

Step 1: Mark Center of Art Placement

Mark the desired center location of the wall art on the wall.

Using a level, draw a perfectly vertical centerline.


This line will serve as the master reference for the entire installation.

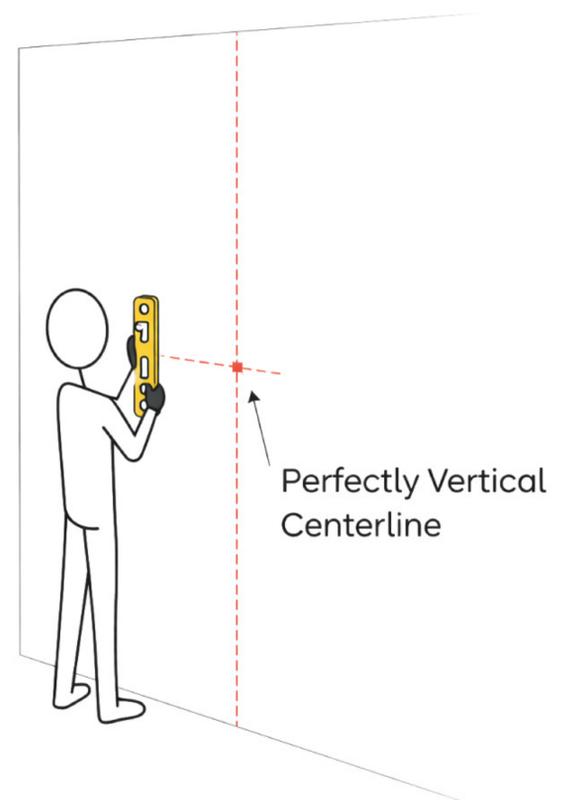

Step 2: Mark Center of Cleats

Locate and mark the center point of each cleat (×4).

These center marks will be aligned to the wall centerline during installation.

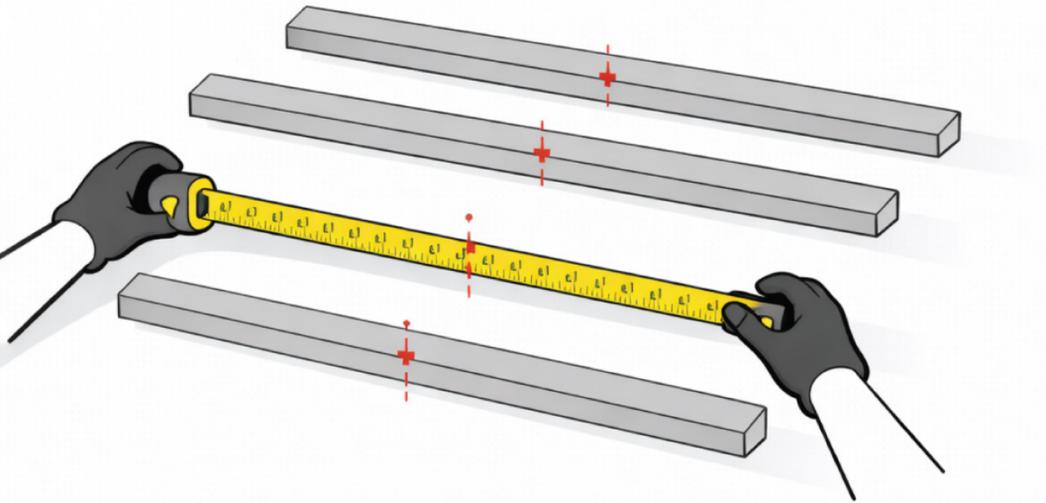

Step 3: Install Top Cleat


Position the top cleat at the desired height.

Align the cleat's center mark with the wall centerline.

Secure the cleat using screws into studs when possible.

Use drywall or butterfly anchors if studs are not available.

Confirm the cleat is level before fully tightening.

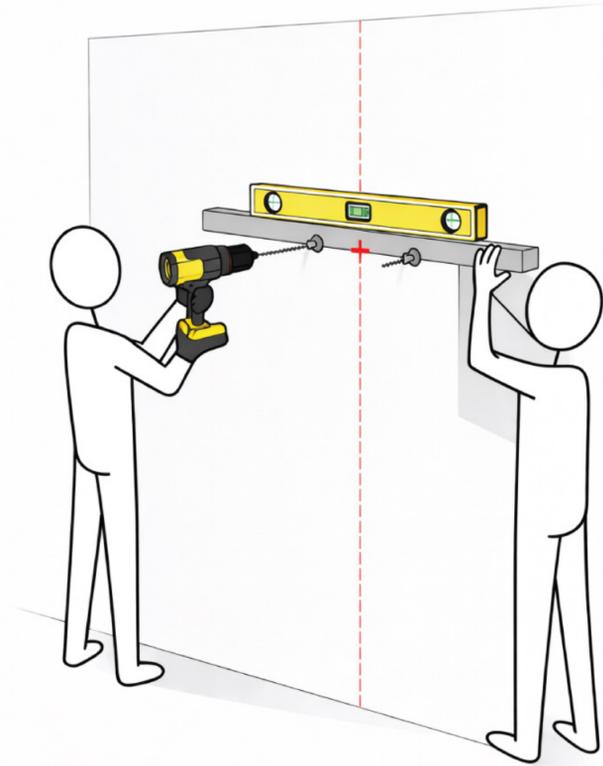


Step 4: Hang Two Initial Panels (Alignment Step)

Hang two panels onto the top cleat.

Engage three slots from each end of the panels.

This step is used to establish proper spacing and alignment before continuing.

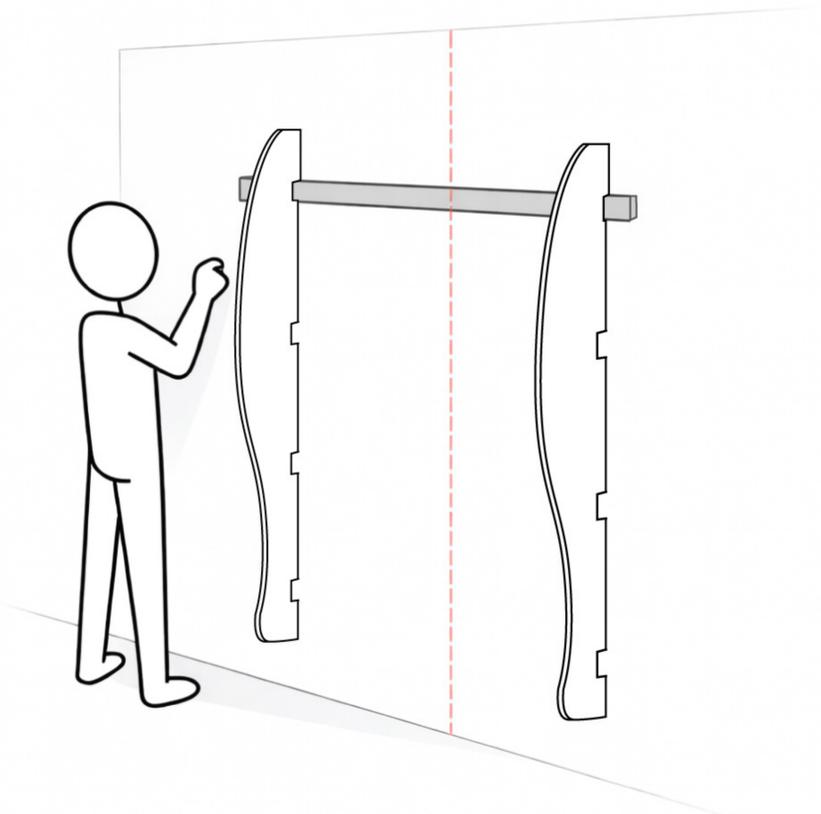

Step 5: Install Remaining Cleats

Insert the next cleat down.


Align the cleat centerline with the wall centerline.

Install the center screw first.

Use a level to confirm alignment.

Once level and centered, secure remaining screws into studs or approved anchors.

Repeat this process for all remaining cleats (if applicable).

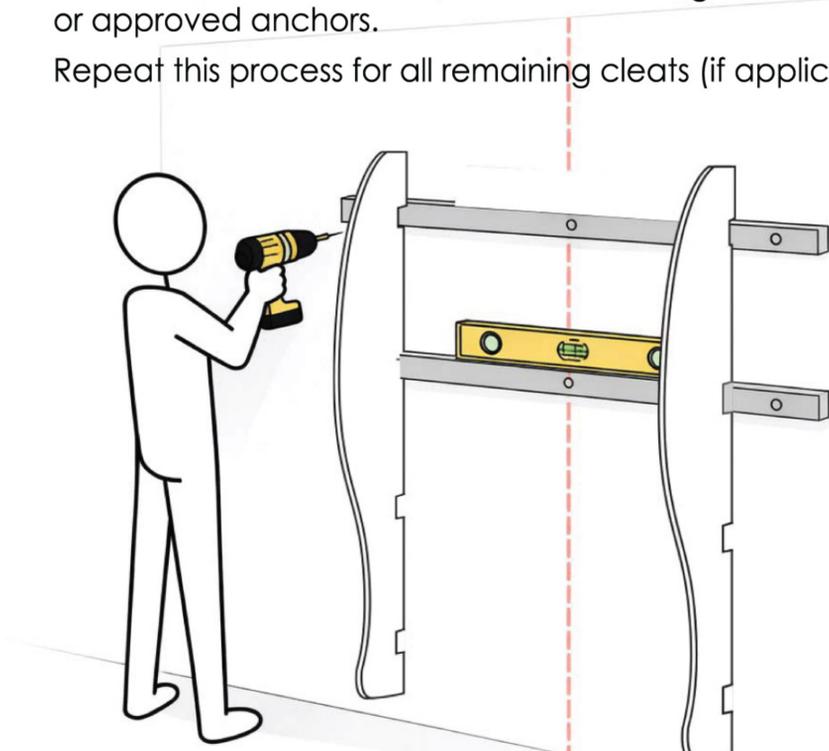


Step 6: Install All Panels

Remove the two initial alignment panels.

Begin installing all panels from left to right, following the numbered sequence.

Ensure each panel is fully seated into the cleats before proceeding.

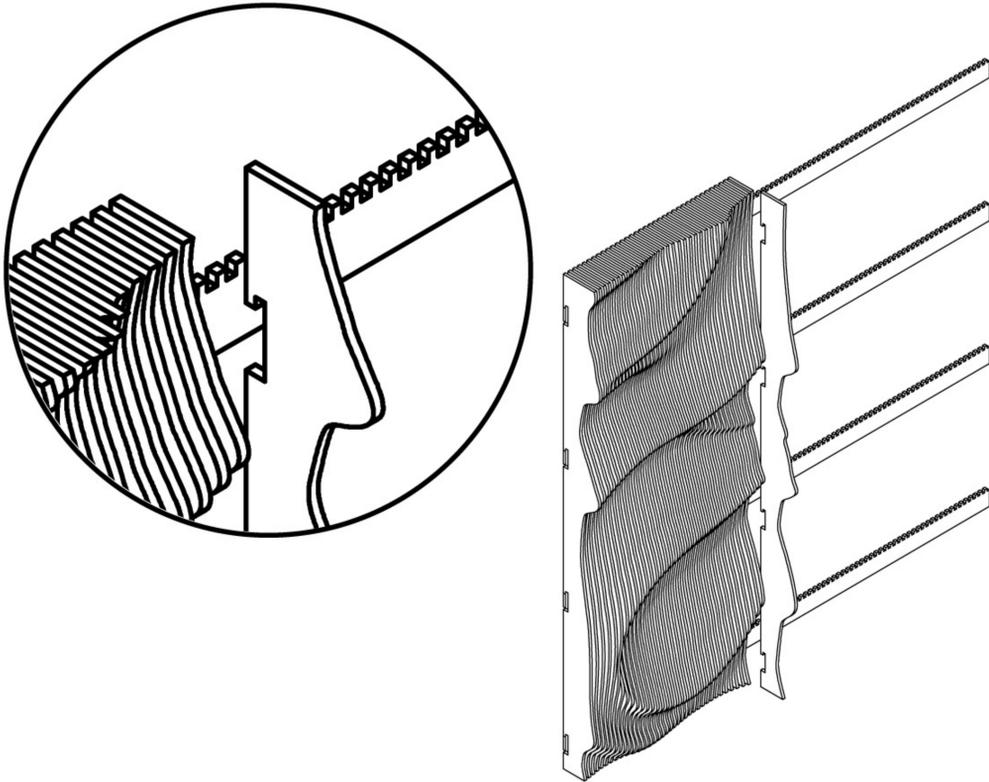


Step 7: Install Top and Bottom Frame Rails

Position the top and bottom frame rails over the panel edges.

Lightly tap into place if needed.

Secure using the provided tacking nails through the edge lips.

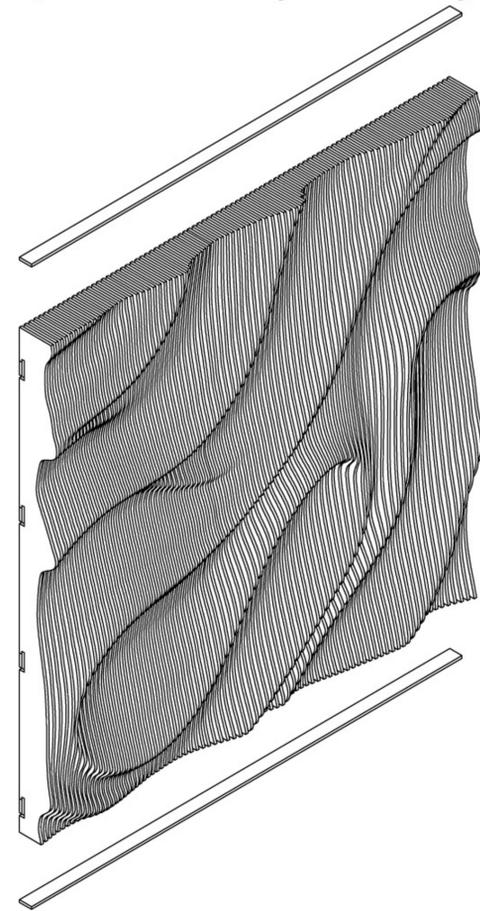

Step 8: Install Left and Right Frame Rails

Install the left and right frame rails to complete the perimeter.

Tack into place using finishing nails.

